



TRISTAR RGB LED Lamp IR Remote Controller

SINGLE ON/OFF buttons

TOGGLE ON/OFF button



4 Pre-set Color Changing Modes:

- ① **Flash:** change colors per 1 second
- ② **Strobe:** change colors per 5 seconds
- ③ **Fade:** change 16 colors *quickly*
- ④ **Smooth:** change 16 colors *slowly*

16 Pre-set Single Color Keys
(The last key is for white.)

4 Light Intensity Adjustment Keys

Lock Remote

When the Remote is not used.

Setup/Cancel keys for RS485

(For setting the ID address for TRISTAR RGB-smart LED lamps.)

Unlock Remote

The Remote is activated.

NOTE: The TRISTAR IR Remote Controller can also be controlled via an ON/OFF line switch as follows:

1. When you turn on the lamp from an OFF status of more than 30 seconds, the lamp will automatically resume to the mode when it was turned off the last time. This is called the “automatic preference mode memory” function.
2. If you turn the lamp OFF and ON again within two seconds, it will go to “Flash Mode”.
3. And if you keep on turning it OFF and ON again within two seconds, it will shift to the next mode, the “Strobe Mode”, and then the “Fade Mode”, “Smooth Mode”, “White”, “Red”, “Green”, “Blue”, etc. The sequence will follow the color sequence as printed on the IR Remote Controller, from Top-Left to Bottom-Right.

ColorStars Group

Taiwan Operations:
Color Stars, Inc.

10F, No. 566 Jung Jeng Rd. Sindian City
Taipei County 231, Taiwan, R.O.C.

Tel: +886-2-8667-6600 Fax: +886-2-8667-1400

Email: sales@colorstars.com Website: www.colorstars.com

Headquarters:
ColorStars Group

300 Center Ave., Suite 202
Bay City, MI 48708 USA

Tel: 989-509-5924 Fax: 989-509-5924

Email: sales@colorstars.com Website: www.colorstars.com